


Before you begin...

Check the package inserts to make sure that the batch numbers match. Please note that patterned wallpaper requires some extra length in order to make the pattern match continuously. When you measure, remember to account for the repeat.


We recommend that you remove old wallpaper, but if it is even and the new paper adheres well to it, you can apply the new wallpaper over it. Be sure to smooth the old joints with sandpaper to make them invisible under the new wallpaper.

You may need the following items: razor knife (with spare blades), ladder or step stool, seam roller, screwdriver, straightedge, sandpaper, marking pencil, wallpaper brush, plastic bucket, sponge and/or cloth, scissors, paint roller or paste brush, string or plumb line, wallpaper spatula.

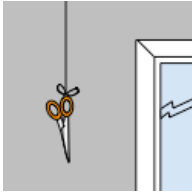

Step 1

Draw a vertical line to place the first section correctly. You can use an ordinary pair of scissors on a string to obtain a straight line. Measure the length of the wall and cut the paper into sections that have an extra 4 inches at the top and bottom.

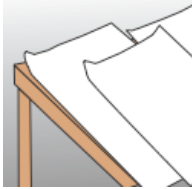

Step 2

Place the sections face down on a table and line the tops of the paper up with the edge of the table. Make sure that the sections fully cover the table – if paste gets on the table, it can stick to the front of the next sections.



Step 3

Apply paste to 2-3 sections at a time using your paste brush or a paint roller. Fold them in half so that the pasted surfaces are touching and let them absorb the paste for about 7 minutes. Be sure to use enough paste.



Step 4

Put up the first section along the line without unfolding the lower fold. Smooth with a dry wallpaper brush or wallpaper spatula, and then unfold the rest of the section. Smooth each section diagonally from the top down and from the center outward, forcing out air bubbles. Roll over seams with the seam roller to ensure that they lie flat and fit together snugly.



Step 5

Mark the edge of excess paper with a ruler or a spatula. Carefully lift it and cut it off. Or, use a wallpaper spatula to make a crease and then trim excess paper with a sharp razor knife. Check all the edges and make sure that they are firmly applied to the wall. It is not too late to add more paste along the edges and smooth the edges back out.



Step 6

When a couple of lengths have been hung, any excess paste on the front of the wallpaper can be removed with a moist sponge or cloth.

When the hanging is done the walls should be allowed to dry as quickly as possible. Ventilate the room thoroughly.

Enjoy!